

Shut Down Solar Water Heater

These instructions should be followed any time your water main will be shut off, or if your tank develops a major leak.

1. If you have an electric pump: unplug the pump from the controller
2. If you have a PV pump: undo a splice
3. Shut off the cold water in & hot water out from tank. These are the pipes coming directly out of the top of the tank. Typically these are ball valves that need a quarter turn clockwise to the "off" position.
4. When the water is turned back on, perform these instructions in reverse order.

